

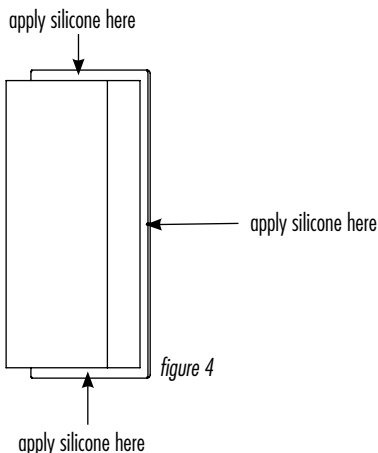
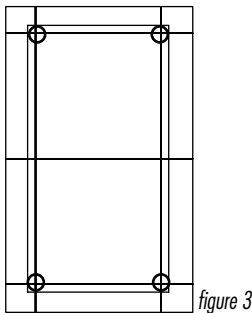


BULLNOSE EDGE SHAMPOO SHELF INSTALLATION

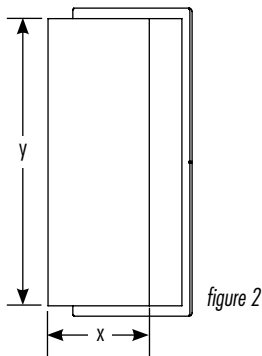

TIME REQUIRED
1 -2 HR.

check for proper stud locations

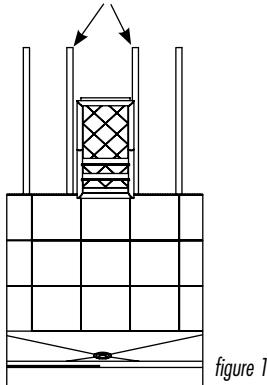

Congratulations on the purchase of your Bullnose Edge Shampoo Shelf! These instructions will guide you through the installation.

1. The shampoo shelf is designed to fit in the place of two vertical tiles and between the studs in your walls. Before installing your shower system check and mark where the studs are so you can properly place the shampoo shelf (*fig. 1*).
(It is not necessary, but if you wish, you can add a horizontal 2 x 4 brace 1/2" - 1" below the shampoo shelf's desired height. This will give you a platform to support the shampoo shelf. After the walls have been installed place shims between the 2 x 4 and the bottom of the shampoo shelf in order to add support to the shelf).

2. Measure the backside of the shampoo shelf (*fig. 2*).
3. Mark the wall panel where you wish to install the shampoo shelf (*fig. 3*).

✓ Be sure the outside decorative bullnose of the shampoo shelf will not interfere with the existing trim molding.

4. Double check your measurements.
5. Drill a 5/8" hole in each corner of your outline. Be sure not to drill outside the marked lines (*fig. 3*).
6. Use masking tape to tape the edge to be cut. This will protect the tile from getting scratched by the jigsaw.
7. Insert the jigsaw blade through the 5/8" hole and cut through the tile and cement board along the lines that you marked.
8. Pull the cut section out of the wall.
9. Carefully dry fit the shampoo shelf into position. Adjust the cut if necessary.
10. When the shampoo shelf fits correctly apply a continuous bead of silicone to the back edge of the shampoo shelf (*fig. 4*). Refer to manufacturer's recommendations for silicone drying time.
11. Set the shampoo shelf into position and apply pressure to ensure adhesion.
12. Wipe off any excess silicone with a clean cloth.